



HP Envy TouchSmart 15 Battery Replacement

How to remove and replace the battery on this laptop. All you will need is your hands.

Written By: Robert Patterson



INTRODUCTION

Replacing the battery can help with problems related to the laptop not lasting long when not plugged into the wall. You can also consider getting an extended battery to replace the original, if you need more time away from the charger.

Step 1 — Battery



- Close the lid and turn the device upside down so that you can see the battery.

Step 2



- Press the battery release tab and the battery will pop up.

Step 3



- Remove the battery from the laptop, it will come out easily.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-19 02:49:33 AM.